



AUDIO & VIDEO MIXING DJ SOFTWARE





Guide peration



Table of Contents

A. INSTALLATION	3
Firmware & Drivers	3
VirtualDJ 8 Setup	3
Advanced Setup	4
B. BROWSER	5
C. EFFECTS	6
D. SAMPLER	7



A. INSTALLATION

Firmware & Drivers

Firmware: No firmware update is currently available. However it is always advised to check Behringer website <u>http://www.behringer.com/EN/Products/CMD-DC-1.aspx</u>

Drivers: No drivers are requires (class compliant device).

VirtualDJ 8 Setup

Download and install VirtualDJ 8 from <u>http://www.virtualdj.com/download/index.html</u> (in case you have not done already)

Once VirtualDJ 8 is launched, a Login Window will appear. Login with your virtualdj.com account. A **Pro Infinity** or a **PLUS License** is required to fully use the Behringer CMD DC-1. Without any of the above Licenses, the controller will operate for 10 minutes each time you restart VirtualDJ.

http://www.virtualdj.com/buy/index.html



A **detection** window will appear next to verify the proper USB connection.



The unit is now **ready** to operate with VirtualDJ.



Advanced Setup

MIDI Operation

The unit should be visible in the CONTROLLERS tab of Config and the "factory default" available/selected from the Mappings drop-down list. The factory default Mapping offers the functions described in this Manual, however those can be adjusted to your needs via VDJ Script actions.

Find more details at

http://www.virtualdj.com/wiki/VDJscript.ht ml

õ	CONTROLLER MAPPING					
AUDIO	Keyboard		Mapping :	factory default		
	Behringer CMD DC-1					
-			Deck:	Automatic (1, 2, 3, 4) v		
INTERFACE						
÷1†	Кеу	Action			^	
	BROWSE	browser_scroll				
CONTROLLERS	BROWSE_ENTER browser_window folders'? browser_folder : browser_window 'songs'? prelisten : nothing					
Ø	BTN_JOG_BTN1	deck 1 load				
- P	BTN_JOG_BTN2	browser_window-1				
OPTIONS	pprions BTN_JOG_BTN3 browser_window +1					
-	BTN_JOG_BTN4	deck 2 load				
Δ	BTN_JOG_BTN5	deck 3 load				
LICENSES	BTN_JOG_BTN6 show_splitpanel 'sideview'				d	
LICENSES	BTN_JOG_BTN7	sideview +1			1	
ĵ,	BTN_JOG_BTN8	deck 4 load				
	PAD1	sampler_pad 1				
BROADCAST	PAD2	sampler_pad 2				
_	PAD3	sampler_pad 3				
7	PAD4	sampler_pad 4				
RECORD	PAD5	sampler_pad 5			~	
REMOTE	Key learn :	Action :				
nowile		audio controls audio_inputs audio_scratch audio_volumes automix browser config			Documentation	

AUDIO Setup

The unit does not have a built-in audio interface, therefore no Audio setup is required.

For further software settings please refer to the User Guides of VirtualDJ 8. <u>http://www.virtualdj.com/wiki/PDFManuals.html</u>



B. BROWSER

behringer CMD DG-1 MIDI CONTROLLER 3 3 3 3 3 4 5 9 4 5 9

This section offers control of the VirtualDJ Browser

- BROWSER. Turn the encoder to scroll through files and folders. If focus is on the Folders list, push the encoder to set focus to the Songs list. If focus is on any other Browser window, push the encoder to send the selected track to the Prelisten Player. While a track is playing on the Prelisten Player, use the encoder to control the position of the Prelisten Player
- 2. FOLDERS. Press this button to set focus to the Folders list of Browser. If focus is on the Folders list, use the same button to open/close subfolders.
- 3. SONGS. Press this button to set focus to the Songs List of Browser.
- 4. SIDEVIEW. Press this button to set focus to the Sideview List. Press and hold the button for more than 1 second to reveal/hide Sideview
- 5. VIEW. Press this button to cycle through the available views of Sideview (Automix, Sidelist, Karaoke, Sampler and Shortcuts).
- 6. LOAD 1. Press this button to load the selected track on deck 1. Press and hold the button for more than 1.5 seconds to unload the same deck.
- 7. LOAD 3. Press this button to load the selected track on deck 3. Press and hold the button for more than 1.5 seconds to unload the same deck
- 8. LOAD 2. Press this button to load the selected track on deck 2. Press and hold the button for more than 1.5 seconds to unload the same deck.
- 9. LOAD 4. Press this button to load the selected track on deck 4. Press and hold the button for more than 1.5 seconds to unload the same deck



C. EFFECTS

This section offers effects control for decks 1 to 4



- **10. FX ON:** Press this button to **activate** the selected **effect** on decks 1 to 4 respectively.
- 11. ENC BOTTOM: Turn the encoder to select the previous/next effect for decks 1 to 4 respectively. If the effect is enabled, the same encoder controls the 1st parameter of the selected effect.
- **12. ENC TOP**: Turn the encoder to control the **2nd parameter** of the selected effect for decks 1 to 4 respectively.



D. SAMPLER

This section offers control of the VirtualDJ 8 Sampler.



- 13. BANK: Press this button to select the next available Bank of Sampler
- **14. MODE:** Press this button to select the **next Sampler Trigger Mode**. Cycles through On/Off, Hold, Stutter and Unmute.
- 15. PAGE: Opens/closes Sideview and sets focus to the Sampler view of SideView.
- 16. SAMPLER VIEW: Toggles between the List and the Trigger Pad views of Sampler
- **17. PADs**. Each one of the 16 buttons **triggers a Sample** as per the image above. If a sample slot is loaded, the led of the button will illuminate blue and will blink when the same sample is triggered.

Hardware Integration Department

2014 - ATOMIX PRODUCTIONS

Reproduction of this manual in full or in part without written permission from Atomix Productions is prohibited.