

DENON DN-X1600

VirtualDJ 8 - Quick Operation Guide - MIDI PAGES

PAGE 1		
PARAM 1	ENCODER	Select video Transition
	PUSH	Select a random Transition
PARAM 2	ENCODER	Video Transition Parameter 1 or 2 depending on the V.TR. Variable
	PUSH	Open/Close FX GUI for Video Transition
PARAM 3	ENCODER	Select Video Effect
	PUSH	
PARAM 4	ENCODER	Video Effect Parameter 1 or 2 depending on the V.FX Parameter button
	PUSH	Open/close FX GUI for Video Effect
FUNC1		Start/Stop Video Transition
FUNC2		toggle V.TR. Variable
FUNC3		Start/Stop Video Effect
FUNC4		toggle V.FX Variable
PAGE 2		
PARAM 1	ENCODER	Deck 1 Key Adjust
	PUSH	Select a random Transition
PARAM 2	ENCODER	Deck 2 Key Adjust
	PUSH	Reset Key
PARAM 3	ENCODER	Deck 3 Key Adjust
	PUSH	Reset Key
PARAM 4	ENCODER	Deck 4 Key Adjust
	PUSH	Reset Key
FUNC1		Deck 1 Reset Key
FUNC2		Deck 2 Reset Key
FUNC3		Deck 3 Reset Key
FUNC4		Deck 4 Reset Key
PAGE 3		
PARAM 1	ENCODER	Sampler Volume Master
	PUSH	
PARAM 2	ENCODER	Sampler Bank Select
	PUSH	
PARAM 3	ENCODER	Sampler Mode select
	PUSH	
PARAM 4	ENCODER	
	PUSH	

FUNC1		Sampler 1
FUNC2		Sampler 2
FUNC3		Sampler 3
FUNC4		Sampler 4
PAGE 4		
ALL KEYS		Unassigned