



PHONO / TURNTABLE SETUP

1. Connect your left turntable phono output to INPUT1
2. Connect your right turntable phono output to INPUT2
3. Set both PHONO/LINE switches on the interface box to PHONO (or LINE if your turntable has line level outputs)
4. If required, connect your turntable ground wires to the grounding lug
5. Connect the PASS1 output to your DJ mixer CH1 phono input
6. Connect the PASS2 output to your DJ mixer CH2 phono input
7. Connect OUT1 to a Line input on your DJ mixer
8. Connect OUT2 to a different Line input on your DJ mixer
9. If desired, connect OUT3 to a third Line input on your DJ mixer for sample playback
10. Connect USB cable from interface box to your computer
11. Open Virtual Vinyl and Click CONFIG at the top right
12. On the Sound Setup tab select TIMECODES in the Inputs drop down menu
13. In the Outputs drop down select 3-Lines Mixer

For timecode configuration please read the Virtual Vinyl quickstart manual

CD SETUP

1. Connect your left CD deck output to INPUT1
2. Connect your right CD deck output to INPUT2
3. Set both PHONO/LINE switches on the interface box to LINE
4. Connect the PASS1 output to your DJ mixer's CH1 line input
5. Connect the PASS2 output to your DJ mixer's CH2 line input
6. Connect OUT1 to a Line input on your DJ mixer
7. Connect OUT2 to a different Line input on your DJ mixer
8. If desired, connect OUT3 to a third Line input on your DJ mixer for sample playback
9. Connect USB cable from interface box to your computer
10. Open Virtual Vinyl and Click CONFIG at the top right
11. On the Sound Setup tab select TIMECODES in the Inputs drop down menu
12. In the Outputs drop down select 3-Lines Mixer

For timecode configuration please read the Virtual Vinyl quickstart manual